

*Thank you for your purchase of a Display Stand
from Lost and Found Toys, Inc.!*

Instructions:

- 1) Place the 3 balls of the rods in the holes on the base.
- 2) Place the cover over the 3 balls and hold down firmly, this will keep the rods standing upright.
- 3) Place the screws in the holes of the cover plate and **use a Phillips-head screwdriver** to begin tightening screws in a slow and even manner. Do not tighten the screws all the way.
- 4) Hold the airplane model slightly above the stand and estimate the desired position of the rods.
- 5) Adjust the rods to balance the position in mind and finish tightening the screws. **Do not over tighten the screws!** Over tightening can put excess strain on rods and cover plate.
- 6) Gently lower the airplane model onto the rod bumpers and verify it is balanced properly. If rods are not supporting your model, it may be necessary to reposition the rods to evenly distribute the weight of the model.

Notes:

Rods are strong enough to hold model but if you adjust too quickly they can be damaged.

For more of a shine, polish the stand with a lint free cloth.

Please remember while the stand can adjust to various angles, use caution with extreme angles. Also the range of position you can adjust will vary from model to model.

Thanks again and we hope FlexiDisplay enhances your model enjoyment and display!

Lost and Found Toys, Inc.

www.LAFtoys.com

